



Health and Safety Warning:

Ceramic fiber products are suspected of causing cancer by inhalation. All ceramic fiber products have a hazard communication warning label and a prop 65 warning for airborne fiber inhalation. You should minimize exposure to airborne fibers. When handling ceramic fiber we recommend using particulate respirator mask (N95), protective gloves, safety glasses and long sleeve clothing. For complete safety information consult the SDS sheet. <https://www.lynnmfg.com/documentation/>



Before you start work:

1. Read all instructions and check the kit number before starting work. **See Note A.**
2. Turn off service switch on boiler and all other electrical disconnect switches.
3. Close fuel supply valve(s) and disconnect fuel line from the burner.




Removal:

4. Disconnect oil burner fuel line.
5. Remove front boiler plate and burner.
6. Remove old front refractory from inside of front plate.
7. Remove old target wall and blanket and clean out combustion area.

Installation:

8. Remove new target wall from plastic bag.
9. Carefully pass the target wall through the opening in the front section and set it against the back wall of the boiler.
10. Reform the top edge of the target wall and tuck the sides into the grooves between the boiler sections to hold it in place.
11. Measure the distance from the bottom lip of the target wall just installed to the front of the boiler, and cut the blanket supplied to this length. **See Note C.**
12. Install the Floor Blanket.
13. If your boiler has the round front insulation with a rope seal, we have provided new rope for you to replace the old rope if necessary. **See Note D.**
14. Place the Burner Mounting Plate Insulation into position and replace the front plate and oil burner. **See Note B.**
15. Reconnect the oil line and electrical.
16. Fire the Burner. **See Note E.**

Special Note: There are two versions of this boiler. One uses the Burner Mounting Plate Insulation provided, the other uses a round front insulation. If you need the round version, we have pre-scored the part provided showing you where to cut. Cut to desired shape using a hacksaw blade or utility knife. Do not use a power saw, it will create too much dust.

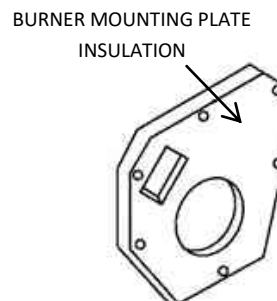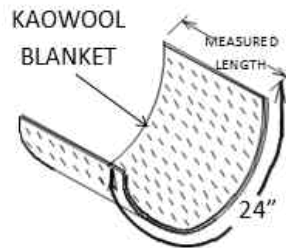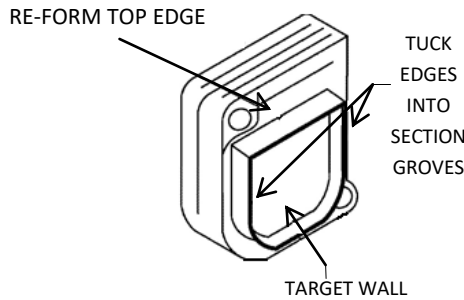

Note A: Correct Kit

Please check this is the correct kit for your make & model boiler by checking the box

Note B: Fitting Ceramic Fiber Pieces

Many of the rigid ceramic fiber pieces are designed to be a firm press fit. To avoid breakage, press carefully and gradually. The fit may need to be adjusted by sanding or

Note C: Installing the Floor Blanket

The blanket provided with this kit is sized for the largest possible boiler and will normally have to be cut to size. The blanket must cover the entire bottom of the chamber. The blanket should be glued in place by covering the floor with waterglass before installing the blanket. Use the entire 4oz bottle that is

Note D: Installing Rope Door Seal

After removing the old sealing rope from door perimeter, clean aggressively with a wire brush. Remove the paper backing from the rope adhesive, and press the rope into the sealing groove. Install so that the ends of the rope meet at the bottom of the door and butt firmly against each other. Maintain a

Note E: Initial Firing

Fire the burner for 15 minutes to allow ceramic fiber insulation to "cure". It is normal when first fired for some smoke and a slight odor to occur. Combustion test must be

Application, Installation and Use Warning:

In applications including; boilers, furnaces, wood stoves, wood inserts, fireplaces, heating devices, and other appliances, parts must be used consistently with original equipment manufacturers specifications, design, function and operation.

Improper installation or use of this product could result in a fire, smoke inhalation or carbon monoxide poisoning. Products should be installed by a licensed and certified technician in compliance with all national, state and local codes. Products should be inspected annually by a licensed and certified technician for wear, brittleness, cracking or crumbling, and replaced as necessary. Lynn Manufacturing, Inc. recommends installers certified by NFI, CSIA or NORA.

Never work on a piece of equipment or touch the fibrous product when it is hot, as the product may show no visible signs of heat from glowing or smoking.

Lynn Manufacturing, Inc offers hundreds of products with many applications. Determining whether the product is a fit for the particular purpose and suitable for an application is the sole responsibility of the purchaser/installer.

In no event shall Lynn Manufacturing, Inc be liable for any damages to property or life arising from or connected with the use of this product.

V0420